



HMD 46 HME 46

- Quick Guide
- Kurzanleitung
- Guide rapide
- Guida rapida
- Guía de inicio rápido
- Guia rápido
- Beknopte handleiding
- Krótká instrukcja obsługi
- Snabbguide
- Kort vejledning
- Pikaohje
- Γρήγορος οδηγός
- Kısa Kılavuz
- Краткая инструкция
- 快速指南
- 快速使用指南
- クイックガイド
- 퀵 가이드

SENNHEISER



www.sennheiser.com/download

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany, Publ. 03/24, 597287/A01

In the box

HMD 46




OR

HME 46



+

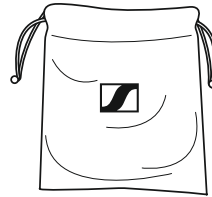


+



Connecting the headset

Connect the cable* to the headset and your system.

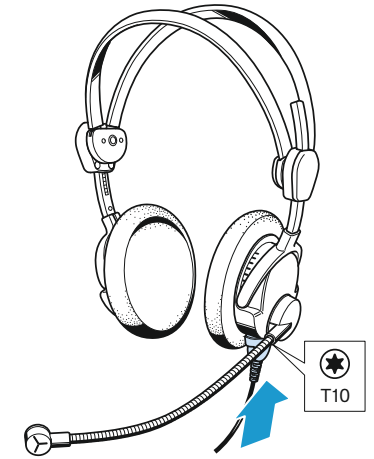






T10

Set your audio source to a medium level.




*Cable not included: Cables with different connectors available - see page 2


Wearing the headset

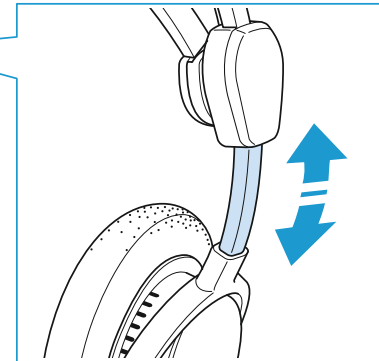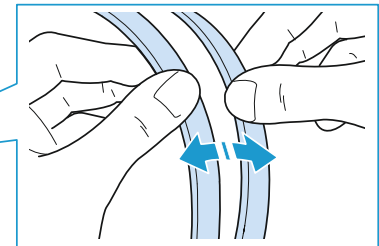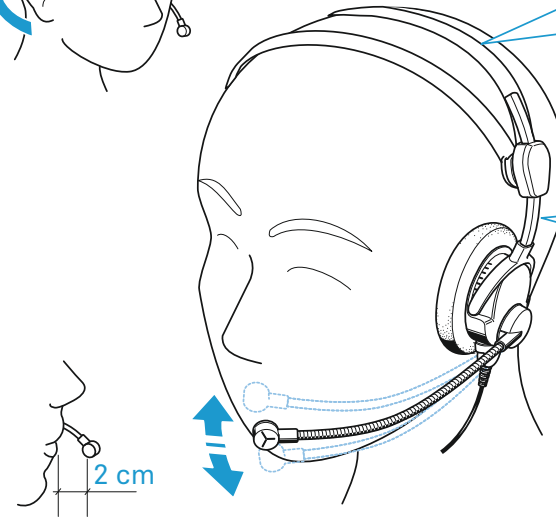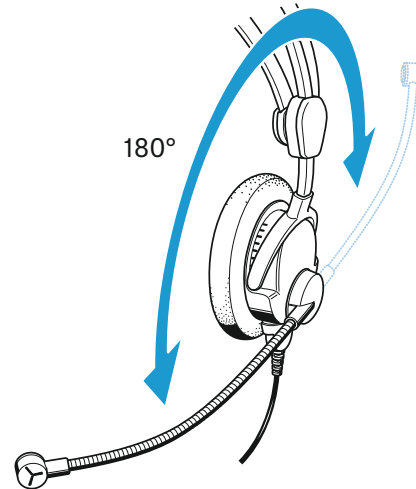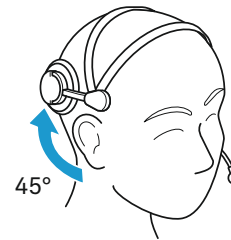

Using the windshield

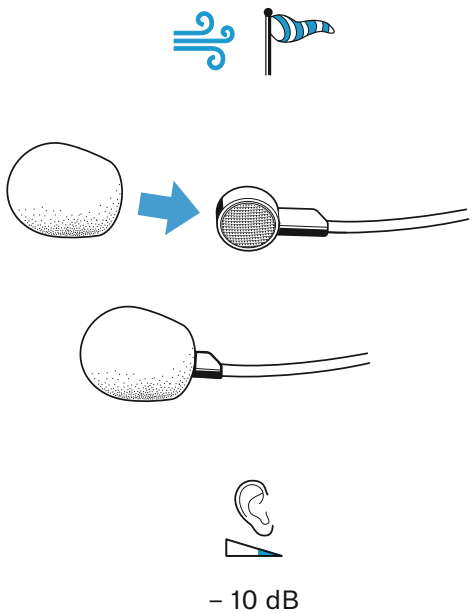


Using the clothing clip

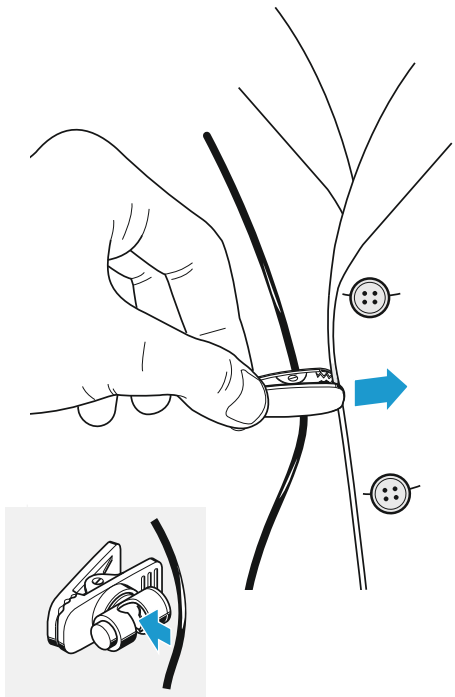


Available cables


CABLE-II-X3K1

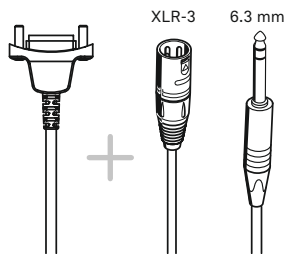


CABLE II-X4F

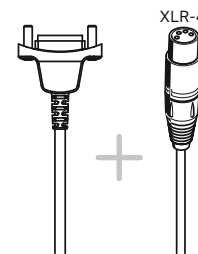


CABLE II-X5

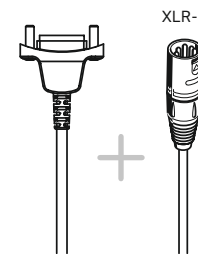


CABLE II-6

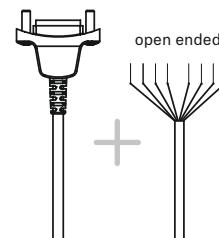


CABLE II-8

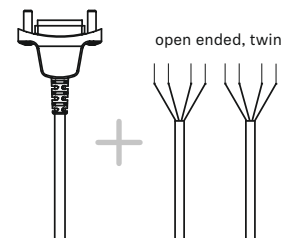


Pin assignment

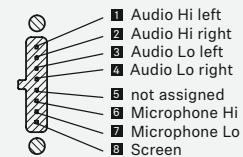

Replacing the ear pads

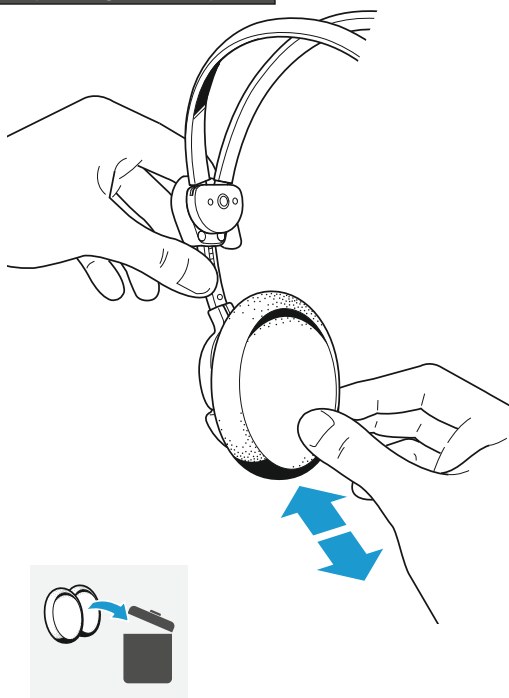

Cleaning

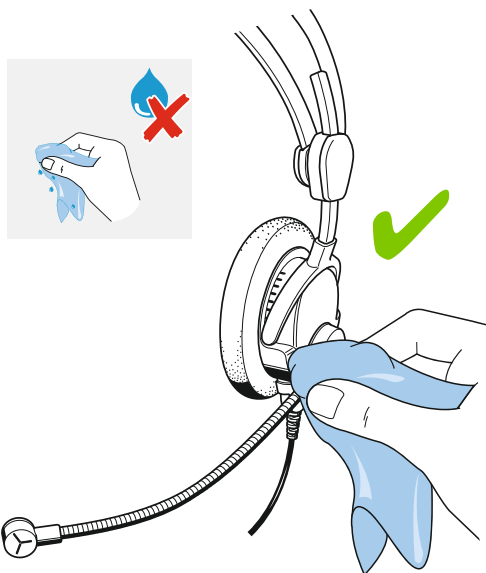

Specifications

	HMD 46	HME 46
Headphones		
Transducer principle		dynamic, open
Ear coupling		super-aural
Frequency response		16 Hz - 20,000 Hz
Impedance		200 Ω
Characteristic SPL		100 dB SPL @ 1 kHz, 1 mW
Max SPL		123 dB SPL
THD		< 0.1 % @ 1 kHz, 100 dB SPL
Contact pressure		2.5 N
Microphone		
Type	BMD 434-46	BKE 46S
Transducer principle	dynamic	pre-polarized condenser
Frequency response	40 Hz - 18,000 Hz	100 Hz - 15,000 Hz
Output voltage	0.5 mV/Pa @ 1 kHz	30 mV/Pa @ 1 kHz
Directivity	hyper cardioid	close-talking
Impedance	300 Ω	-
Interface	balanced	phantom powered 48 V
General data		
Temperature range		
Operation		-15 °C to +55 °C
Storage		-40 °C to + 70 °C
Weight without cable		approx. 150 g